

# ACTSAFE ACC POWER ASCENDER PRE-USE CHECKLIST



PLEASE NOTE: This document is a guide and must only be used as an addition to the user manual.

**1 Sling & carabiner**  
Check that the connection sling is in good condition. There should be no abrasions, wear, cuts, burns etc.  
Inspect carabiner for wear, damage and deformations. Check that it opens and locks correctly.



**3 Basic function**  
Test emergency switch and see that it works correctly.  
Drive up/down and check that acceleration works correctly and stops when handle is released.



**2 Battery pack**  
Inspect all batteries and connectors for obvious damage.  
See reverse for more detailed advice or read the battery safety and handling guidelines.



**4 Rope guide**  
Check rope guide for deformation and damage – sharp edges in particular. Check carefully for wear on the inside corners of the loop. The minimum permissible diameter is 7mm.



**5 Rope wedge**  
Check that the wedge is not bent. It should be positioned centrally above, and touch, the lowermost part of the rope grab.




**6 Rope cover**  
Inspect for any obvious damage, deformation or sharp edges. In particular, check the connection ring between the rope guide and the rope cover for excessive wear.



**7 Rope grab**  
Check that rope grab is clean, not filled with dirt, sand, paint or any other foreign material. Check the inside for obvious damage, signs of wear and sharp edges.



**8 Emergency descent pin**  
Check that emergency descent pin is present. Test the emergency descent function of the ascender and then return the descent pin to its pocket.

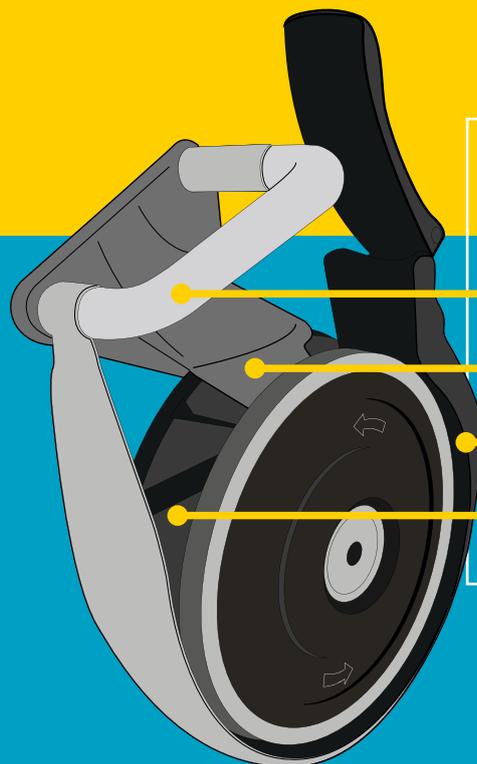

## Rope mechanism

- 4** Rope guide
- 5** Rope wedge
- 6** Rope cover
- 7** Rope grab

## IMPORTANT

If you find any inconsistencies **DO NOT** use the ascender. Contact your local Actsafe Ascender distributor for advice.

A power ascender should never be used without a backup system when being used to lift people.

### REMEMBER



Soak ropes before first use



For safety alerts and industry information visit [www.actsafe.se/safetyalerts](http://www.actsafe.se/safetyalerts)

Contact ActSafe or your local ActSafe Ascender distributor for more information.

ActSafe Systems AB  
Sagbäcksvägen 13  
437 31 Lindome  
Sweden

T: +46 31 65 56 60  
E: info@actsafe.se

[www.actsafe.se](http://www.actsafe.se)